星迈创新科技（苏州）有限公司

项目名称

P0011

版本号

V1.2

设计时间

20260110

物料名称

M1 快速使用指南

设计师

尚为杰

审核

祁琦

批准

料号

XM041902-0014

材质工艺要求：

材质要求： 铜版纸 300g **双面 覆防刮膜**

颜色及专色： C:100 C:100 M:70 Y:0 K:0

尺寸要求： 按照出血线裁切，裁切后尺寸为 511*446 mm

SKZ
SKRQ

变更履历：

V1.2 增加右上角二维码 2026.01.26

注：此页面非印刷内容

Beatbot

Quick Start Guide

Quick Start Guide

Scan to Check E-Manual

1 Structure Diagram

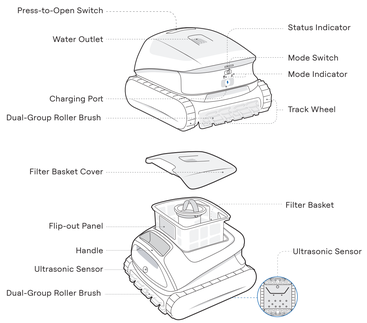

*The diagram is for reference only. Please refer to the actual product for accuracy.

2 Start Charging

1. Ensure the charging contacts on the both sides of charger are dry and clean. Align and connect the charger to the robot's charging port.



2. Plug the charger into a power outlet. A breathing light indicates charging is in progress. The robot is fully charged when the status indicator turns solid green.



Tips:

1. The robot is partially charged for safety during shipping. A yellow status indicator is normal upon unboxing. Please fully charge the robot before first use for optimal performance.
2. Please charge the robot indoors in a dry, cool place with stable Wi-Fi coverage.

3 APP

You can either scan the QR code below or search for "Beatbot" in the App Store or Google Play to download the App.

Download on the App Store

GET IT ON Google Play

Once powered on, the robot will automatically enter network setup mode. Open the Beatbot App. Tap "Add Robot" on the home page, then choose one of the following methods to add your robot and complete the setup:

Ensure Bluetooth is enabled on your mobile phone. It will automatically search for your robot model.

Aim your phone's camera at the QR code located on the robot.

Tap "Add Manually", select your robot model from the list.

4 Power On & Select Mode

When the robot is off:
Push the mode switch to / and release immediately (within 1 second) to power the robot on. The cleaning mode is selected based on the direction you pushed. And the corresponding mode indicator turns solid white.

When the robot is on:
Push the switch to the desired position and release it immediately (within 1 second) to change the cleaning mode.

Cleaning Mode	Coverage
Standard Mode	Floor, Walls & Waterline
Preset Mode (Floor Mode defaulted)	Floor

Tip:
You can select other cleaning modes via the App. Your selection will automatically sync to the robot, allowing you to start it directly with the switch next time.

5 Start Cleaning

1. Gently place the robot into the water along the pool wall.

2. The robot begins to submerge and will settle on the pool floor within 2 minutes. Once settled, it will automatically begin cleaning.

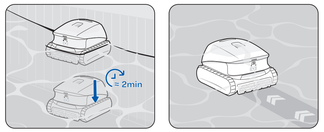

6 Retrieve

1. After completing the cleaning task, the robot parks itself at the poolside. When lifted out of the water, it will begin draining automatically.

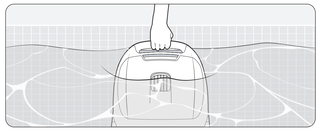
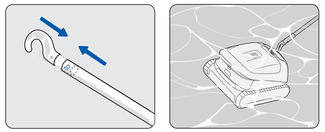
2. In the unlikely event that the robot does not return to the poolside automatically, you can manually retrieve it using the supplied hook.