

**Find the center line and measure 950 mm from the center line.**
**Remove the screw from the middle (from the wall board jig).***
**Remove the screws from the edge (screw locations may vary depending on the wall construction).***
**Remove the board!**


* Only from the last wall board!

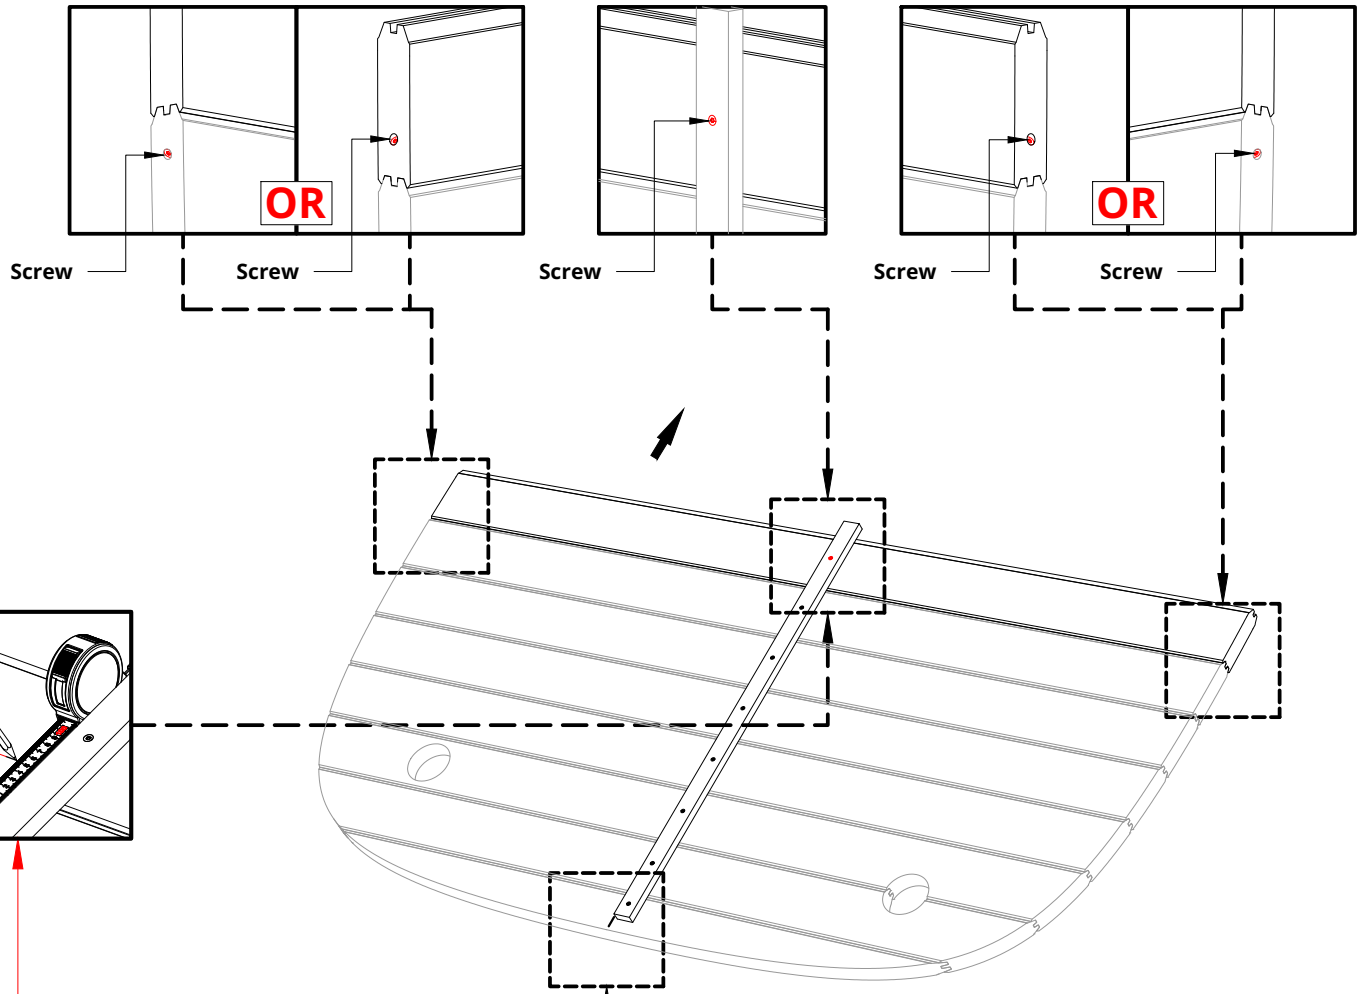



**Back wall**
*(Half Panorama back wall)*


**Back wall**
*(Wooden back wall lower part)*

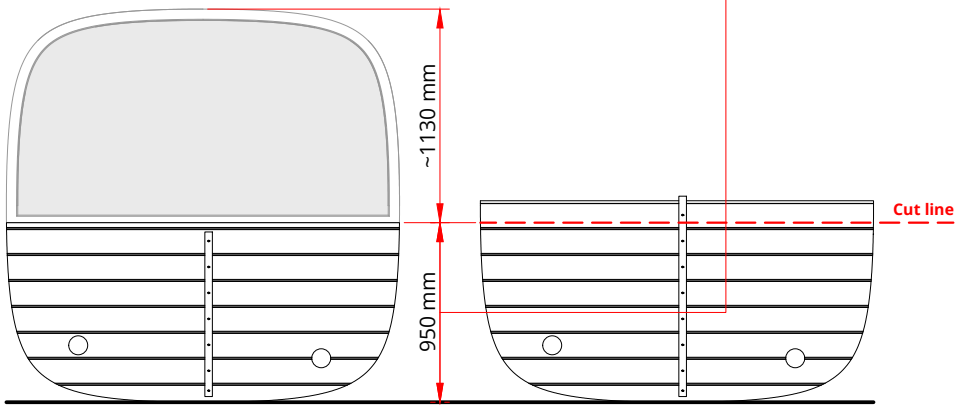

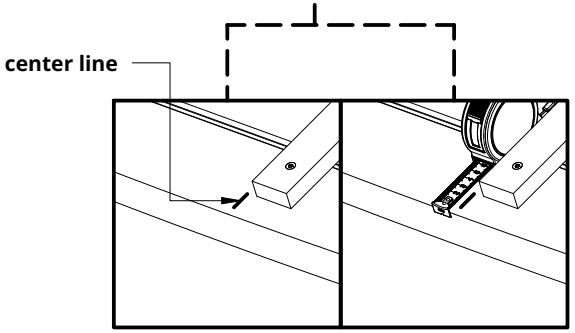
***Please countersink the screw head(s)!***
**Measure the distance from the bottom edge of the board to the previously marked line.**
**Mark the measurements on both ends.**
**Connect the marked measurements with a line and then cut the board.**
**Screw the board back to the wall with 6 screws.***
**Cut the wall jig shorter (Recommended).**


*Drill holes for screws, otherwise which the wood may crack.

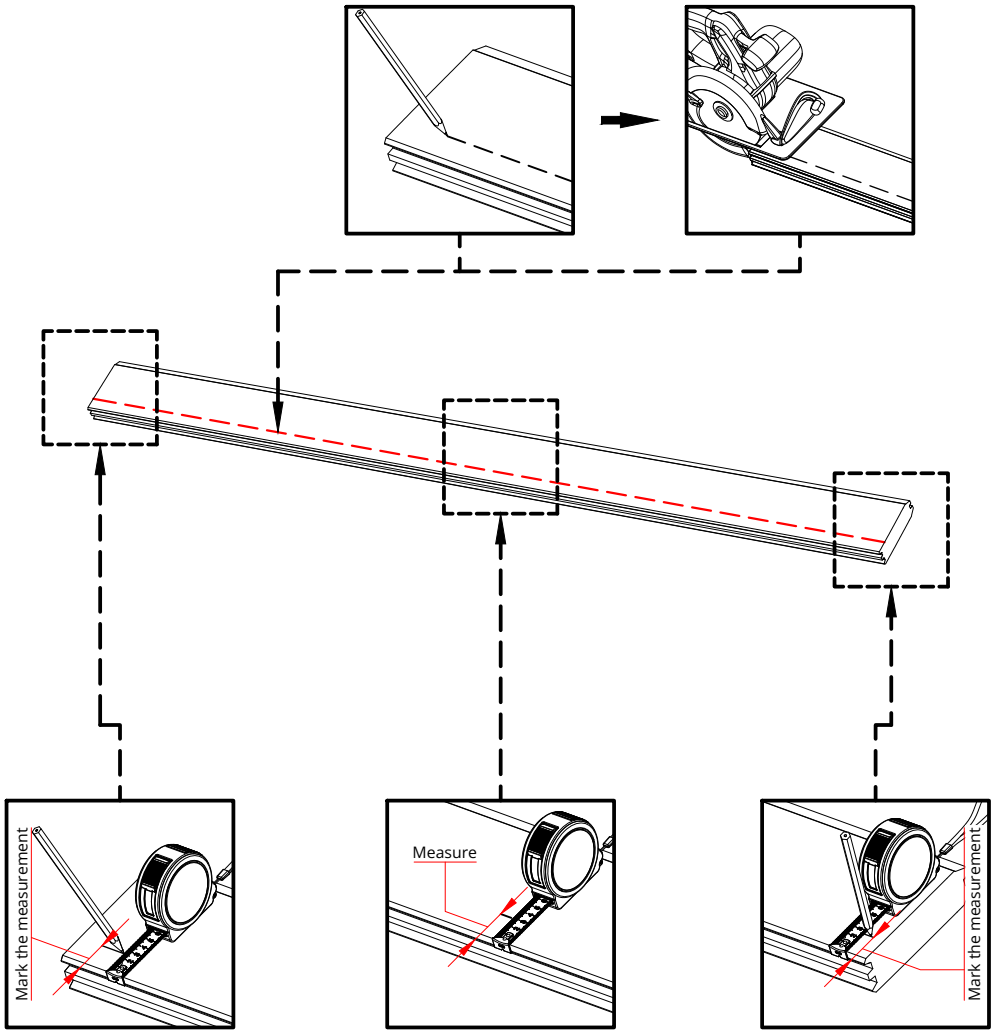

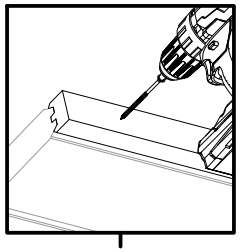**Notice!**
Drill small hole(s) for the screws.



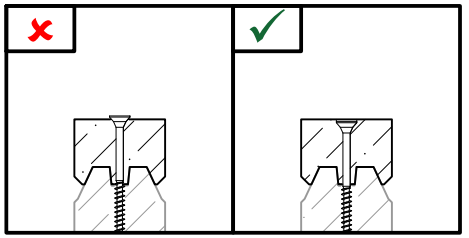

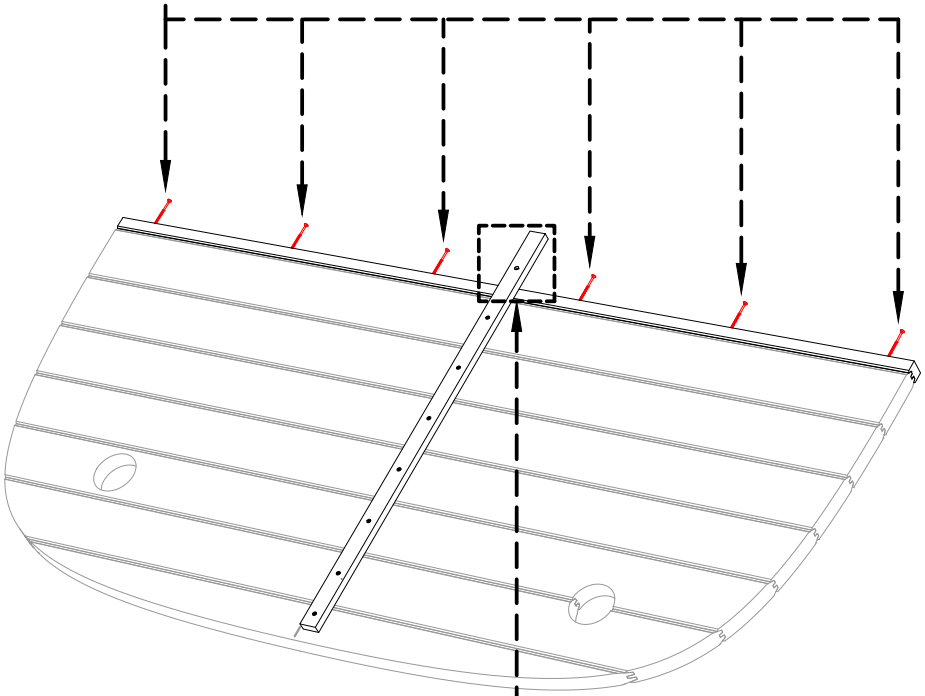**Recommended!**
Cut the wall jig shorter.

